




RMT MANUAL

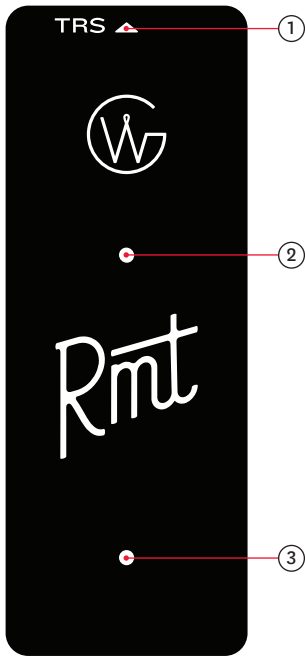

1. TRS jack
2. LED
3. Foot switch

RMT is a remote switch designed to work with both versions of The Underfacer and Isolator, and connects to any version of these products with a standard TRS cable. It will also work with a TS cable if you're in a pinch, however for the RMT's LED to function you will need a TRS cable.

It controls The Underfacer's summing and master mute and Isolator's two muting options.

Connection

Connect to either The Underfacer or Isolator's RMT jack.

When connected to The Underfacer

- Press the foot switch to activate The Underfacer's master mute – RMT's LED will be lit when mute is engaged.
- Hold the foot switch for 3 sec to switch back and forth between The Underfacer's stereo and mono modes – RMT's LED will flash to show the mode has changed. The Underfacer's LED will change colour to show which mode it is in. RMT's LED does not change colour.

When connected to Isolator:

- Press the foot switch to mute Isolator's OUT B – RMT's LED will be lit when mute is engaged.
- Hold the foot switch for 3 sec to activate Isolator's master mute which affects OUT A and OUT B – RMT's LED will flash to show when the master mute is engaged, and then flash again when it is disengaged. If OUT B's mute is already engaged, the master mute will affect OUT A only – see the Isolator manual for further explanation.

Specs

RMT requires no power.

Dimensions (incl. all jacks and switches):

36mm wide x 93mm deep x 44mm high

Weight: 95 grams